Bid Manager Take Off User Guide

The modern design was created with a wide range of user inputs and makes configuration easier – especially for new users. This design will allow future takeoffs to easily display on Eaton.com, Channel Sites, Order Center, CPQ, and other interfaces. The common look and code base for this design makes updates faster and easier as well as mobile ready. Note that the Bid Manager "shell" (Jobs/Pricing) has limited functions on Mobile JOE/ mobile My.Eaton at the present time. However, takeoffs with this design are fully mobile compatible and ready.

Please Note: the new takeoff design will not work with the browser Internet Explorer 11. Please use Chrome to avoid errors.

1. Bid Manager takeoffs are being redesigned for ease of use. Start with the **Basic Characteristics** option, and work the choices from top to bottom to configure your product.

	Lead Time: N/A	Price: \$0.00	E
Basic Characteristics			
Service/Accessories			
Special Modifications			
Freight Calculator			
Application (single unit or parallel)			*
Select System kVA Rating		+	•
Number of Parallel UPS Units			•

2. If you have **Service / Accessories** choose that from the Systems Options Drop down and work your way down.

System Options Service/Accessories	-
Bypass/Distribution/Parallel Options	^
3 and 4 Breaker Bypass Options	•
Integrated Distribution Cabinet	•
Subfeed Breaker 1	• •
Cubfood Decoluor D	•



If you have **Special Modifications** choose that from the Systems Options drop down. Add **Special Modifications** will then open the below window.

nter a descript	ion of the special mo	dification. This information will be pro	ovided to the plant as part of the
elavant docum	entation.		
Description *			~
uantity an	d Price		
nter a quantity	and price below		
Quantity	Price	Catalog #	

After your basic configuration, if you need something that's not in the list, such as adding a maintenance bypass or a service quote for additionally, separately priced services you will add that here.

3. Next choose the **Freight Calculator** option from the System Options drop down menu. Choose your **Destination State** from the drop-down list.

System Options Freight Calculator	
Freight Calculator	^
Calculate Freight	
Destination State *	•
Freight Estimation	
Add Calculated Freight to BOM	
Manually Enter Freight Cost	
FOB Destination	



Additional New Features

Pricing appears at the top of the configuration. A pop up with more information, including catalog number is available by clicking the **numbered list** icon.



			oo I.
No Errors		-2,730.	00 E
Alerts			•
🔺 Network Card Requ	ired	- 1	
PredictPulse Monit can be selected in t Service/Accesories	oing service requires a Network M2 he Basic Characteristics or the ab	Card, this	•
A Service Notification			
First Year 8 Hour Re	sponse 7x24 Coverage Included w	ith UPS	
Recommendation	5		
Takeoff Resources		_	
93E Takeoff Help G	uide		

When you click the **Bell icon** or when you save your configuration, the system will check for Validation Errors and Alerts and will display the Technical Data Sheet for that product.

FAT•N



The Overflow menu icon (three dots) has useful but less frequently used functions that may vary based on your role.

On the top left, you can also **Make a Copy** and **Save** your item to a list of jobs in Bid Manager. The Make a copy button allows you to save multiple line items to your bill of material with different designations. It is similar to the former **Save As** button.